

Odoremove

Quick guide




Terms of condition

- Hardware version of the device: v.4.007B (2017) or subsequent versions.
- Software version: v.4.131 or higher.


Battery

- CR2430 3V lithium.
- To install the battery: remove cover. Align the battery at an angle to grab it in the top of the casing and fold down so that it is fixed by the top and bottom of the casing of the remote.
- To verify the status of the battery: hold down the "Status" key for 5 seconds. If the top light (G) is green, the battery charge is good. If the top light is red, the battery must be replaced soon.

Pairing the remote control with a device

- The Odotrack device must be connected and powered.
- To pair/unpair: Hold down the "Status" and "Business" keys **S** + 
- The keys will be backlit and a tone should be heard.
- To validate, hold down the "Status" key for 5 seconds. The bottom light (7) will be blue.

Remote

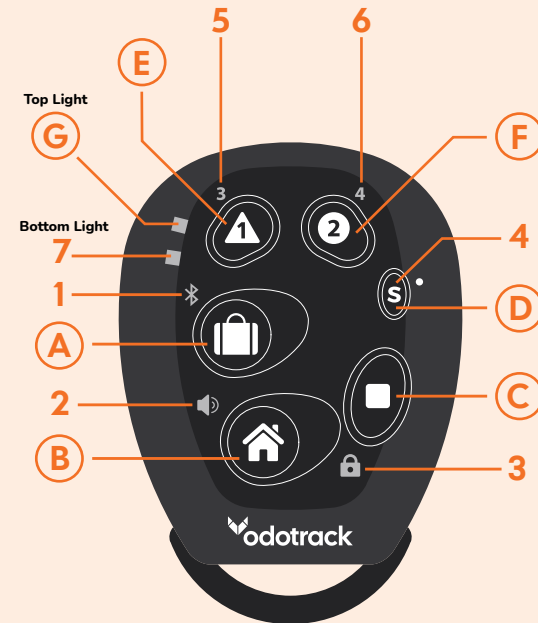







Features













Lights	Colors	Indications
Top light (G)	Green	Battery charged or function activated
	Red	Replace battery or function deactivated
Bottom light (7)	Blue	Bluetooth activated or pairing confirmed
	Flashing blue	Search mode for a device (pairing attempt)
	Orange	Choice of secondary function – Locked keys (Hold down "Status" key for 3 seconds)
	Flashing orange	Choice of secondary function
	Light off	Bluetooth deactivated (or no pairing)

Important notice: Always be careful when using this remote controle while driving.

Features

Letters	Primary features	Keys
A	Business mode	
B	Personal mode	
C	End of trip	
D	Status key (Hold down for 5 seconds)	
E	Function 1	
F	Function 2	
G	Battery charge/ Success or error index	

Features

Numbers	Secondary features	Keys
1	Turn On/Off Bluetooth connection	 + 
2	Turn On/Off sound	 + 
3	Lock/Unlock keys	 + 
4	Activate the combination of keys (Hold down "Status" key for 3 sec. then press secondary key)	 + 
5	Function 3 (future option)	 + 
6	Function 4 (future option)	 + 
7	Bluetooth status/ Status activation (or locked status)	

Warning

- We recommend using brand name batteries like Energizer™, Duracell™ or Panasonic™.
- The battery life may vary depending on the temperature and use of the remote.
- The plastic casing has met North American quality standards for temperature. To avoid any breakage, do not leave the remote exposed to direct sunlight.

Product warranty

- The Odoremove is under warranty should any defect arise in the three months following the date of purchase. The device is not covered in case of breakage, fall, water damage or prolonged exposure to cold or heat. The battery that is supplied is not covered by this warranty or any other warranty. Replacement of the battery is at the user's discretion.

Important notice: Always be careful when using this remote controle while driving.

Need more help?

Support/FAQ: odotrack.com/en/faq
Telephone: 514-388-7734
Toll-free: 1-877-388-0810
Email: support@odotrack.com